

USER GUIDE

Wall-mounted bars & portable columns • Updated 16 Oct 2026

LED MINI 2 BARS • 1 METRE

Plug in. Play music. Enjoy.



COLUMNS • PORTABLE



WALL-MOUNTED • FIXED

Ready to enjoy in 3 steps


1. Position the lights and connect the supplied plugs.
2. Plug in the adapter and switch on with the remote.
3. Play music and choose your favourite effect.

01. Meet your LED set

Preassembled for simple use at home.

Both versions offer the same functions, with different housings and placement options. Ideal for living rooms, music systems and rooms with large speakers.

Version	Placement	Price/set (VND)
Columns	Standing bases; easy to move	1,800,000
Wall-mounted	Fixed wall installation	1,100,000

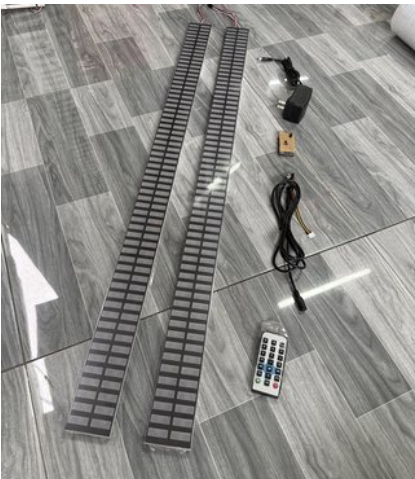

Included accessories

- Two 1-metre LED bars.
- Sound-reactive controller.
- Power adapter and remote.
- **1.8-metre** connection cable.

Extra cable: **VND 50,000 per metre.**
Tell us the length you need before installation.

Quick reference

Topic	Page
Installation and connection	3
Using the remote	4
Music modes and effects	5
Checking the audio input	6
Status indicator	7
Using the board button without a remote	8
Troubleshooting, care and warranty	9

02. Installation and connection

Choose a suitable position for reliable sound pickup.

- 1 Choose a position**
Columns: place the bases on a firm, level surface. Wall-mounted bars: secure them properly, away from places where they may be knocked.
- 2 Position near your music system**
Leave approximately **0.5 - 1 metre of clearance** from the speaker system. Keep the microphone clear; avoid placing it against, or directly on, a vibrating speaker cabinet.
- 3 Connect the cables**
With power disconnected, match the supplied plugs and insert them in the correct orientation. Do not force them or change the wire order. Check that all plugs are secure.
- 4 Connect power and use the remote**
Use the supplied adapter. Connect it to the cable harness, then to mains power. Point the remote at the controller and press the red power button to switch the lights on.
- 5 Play music and enjoy**
The controller microphone picks up sound from your speakers. In microphone mode, no audio cable to your phone or amplifier is needed.

Before disconnecting or moving

Unplug the adapter first. Hold the plug body, rather than pulling the wire. Make sure the columns stand securely after moving them.

03. Using the remote

Point the front of the remote at the controller receiver.



Red power button

Press briefly to turn the lights on or off.

Tap versus hold

Tap: press and release.

Hold MODE for about 1 second to change music mode.

Tap MUTE briefly

The green crossed-out speaker button checks the input signal. See page 6 for how to read the result.

Key	Action and result
+ / -	Increase / decrease brightness.
Previous / Next	Select the previous / next effect and keep that effect selected.
Play / Pause	Keep the current effect; the lights still react to music.
MODE: tap	Resume automatic effects and immediately switch to a different effect.
MODE: hold ~1 s	Switch between Gentle and Energetic modes.
0 - 9	Select an effect directly; see page 5.

MENU, OK and Return are not needed for basic use. Use configuration functions only with guidance from the shop.

04. Music modes and effects

12 effects • Automatic changes approximately every 15 seconds.

Choose the response to your music

Hold **MODE** for about **1 second** to switch between modes. Identify the active mode by the controller status indicator:

Mode	Suggested use	Indicator
Gentle	Try with ballads, soft melodies and slower rhythms.	1 cycle/second
Energetic	Try with remixes, dance and clear bass beats.	2 cycles/second

Choose your favourite effect

Use the number buttons for direct selection. Use Previous / Next to browse all 12 effects, including the last two.

Key	Effect	Key	Effect
1	Red fire	6	Neon purple
2	Ice blue	7	Rainbow body
3	Champagne gold	8	Blue - purple - red
4	Classic VU	9	Centre bloom
5	Colour wave	0	Lotus pink

Prefer automatic changes?

Tap MODE. To keep one effect, press Play / Pause. The lights continue reacting to music in both cases.

05. Checking the audio input

A brief MUTE press checks the input; it does not change sensitivity.

- 1

Play music you normally listen to

Keep the speaker volume at your normal listening level. Choose a passage with clear bass and melody.
- 2

Tap MUTE and release

The controller averages the input for about **3 seconds**, then displays one fixed reading for about **1 second**.
- 3

Read the level on the LED bars

Use the reading to assess the audio input. The lights automatically return to their music effect afterwards.

GREEN	YELLOW	RED
Observed level	What to do	
Low; mostly green	If the lights react weakly, try slightly increasing speaker volume or adjusting the input control.	
Higher; reaches yellow	Watch the response and keep a level that gives clear movement with the beat.	
Frequently reaches red	The input is high and may be close to clipping. Reduce speaker volume or input gain, then test again.	


Make small adjustments

Compare using the same position and music passage. If adjusting the blue trimmer on the board, turn it gently, avoid nearby components and do not force it past its end stops.

Avoid holding MUTE: holding it opens LED-count setup. If you accidentally enter this mode and see a fixed green bar, press Return to cancel.

06. Understanding the indicators

Learn the difference between the status and power indicators.

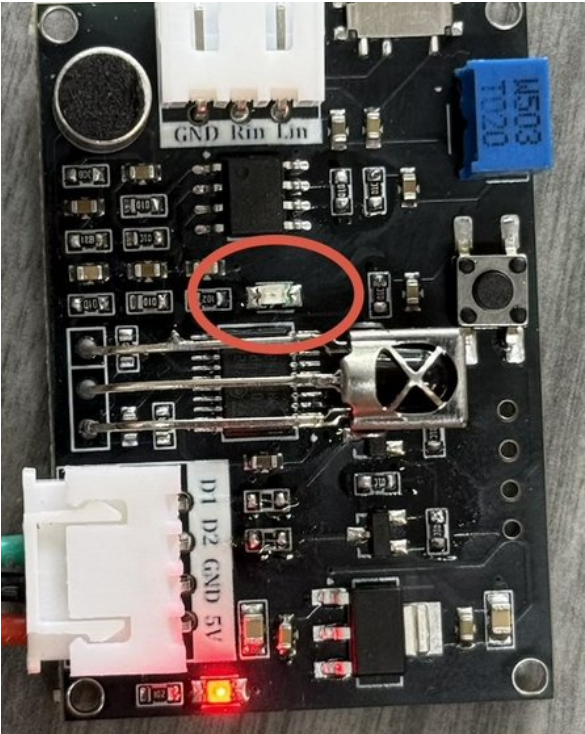

Status indicator

The small LED circled in red in the middle of the board.

Power indicator


The red LED near the cable connector at the bottom. It may stay lit after switching the lights off with the remote because the adapter is still connected.

Status indicator	Meaning
On 0.5 s / off 0.5 s	Gentle mode: 1-second cycle.
On 0.25 s / off 0.25 s	Energetic mode: 0.5-second cycle.
Brief rapid flashes on remote use	The controller received an infrared signal.
Off after remote power-off	The lights are off. The status LED is not an audio-level meter.

No remote? See page 8 for instructions for the controller button.

07. Using the set without a remote

Use the board button to choose effects and music modes.

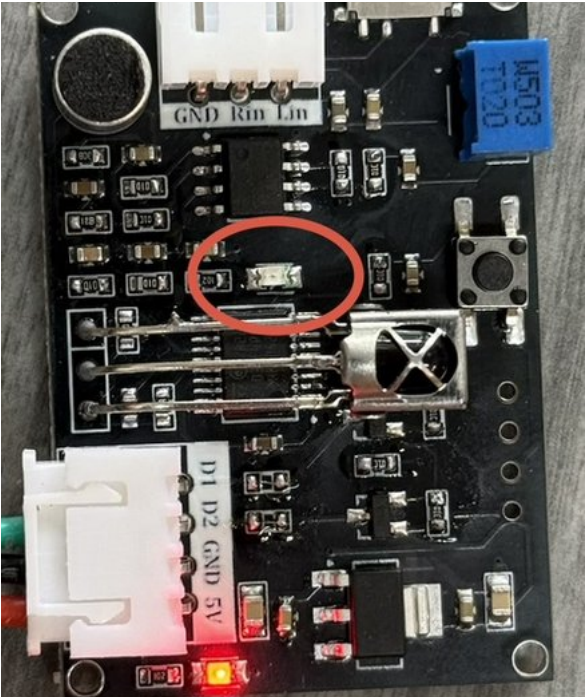

Find the correct button

The black push button in a square metal frame is to the right of the red-circled indicator in the photo.

Press with a fingertip. Do not poke the board with metal tools.

Action	Result
Tap once	Move to the next effect and keep it selected. Repeat to browse all 12 effects.
Tap twice quickly	Switch Gentle / Energetic modes. Make two quick taps; check the indicator pattern on page 7.
Hold for about 1 s, then release	Toggle automatic effect changes. When enabled, effects change approximately every 15 seconds.

Power on/off without the remote

The board button does not act as the remote power button. Disconnect power to turn the set off. Reconnect to start it; if it was previously switched off by remote, unplug and reconnect the adapter.

Avoid repeated rapid presses, which can open the factory-configured LED-count setup. If this happens and you have no remote to cancel, contact the shop before proceeding.

08. Support and warranty

Both the column and wall-mounted versions have a 1-year warranty.

Symptom	Quick checks
Both bars are dark	Check the outlet, adapter and plugs. Point the remote at the controller and press the red power button. Play music.
Only one bar works	Unplug power, check that bar's connector and cable, then reconnect.
Weak response	Check microphone position, speaker volume and music mode. Tap MUTE to test the input.
Bars often stay high	Test with MUTE. Reduce input if it often reaches red; try the other music mode.
Remote responds poorly	Aim at the receiver and remove obstructions. Check the battery and remove any battery isolation tab.
Entered LED-count setup	Press Return to cancel. Avoid changing the LED count configured by the shop.

Care and 1-year warranty

Use indoors in a dry, ventilated location. Unplug before cleaning with a soft, dry cloth. Use the supplied adapter; contact the shop before replacing it or repairing cables.

For support, send a video showing both bars and the controller, with the music audible. Describe what happened and include your order details for warranty assistance.



BAO TRAN LED MUSIC
baotranledmusic.com
Scan to visit our website.

Instructions checked against BassSync V15.1.1. If your set uses a different version, contact the shop for the appropriate instructions.